




# 005-0125 Reference Sheet

## Start Up

This room is built on a **Standard Digital platform** and utilizes a touch panel for projector, input, and volume controls.

To start the system, touch the screen and wait for the projector and screen to warm up and come down.

## Controls

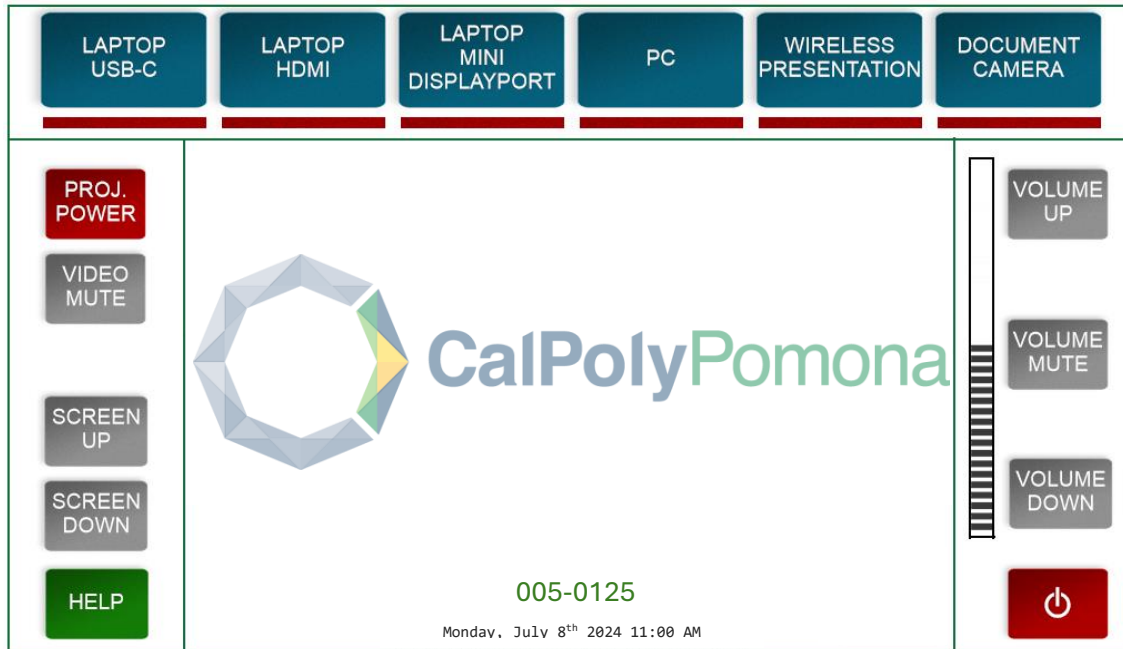

Across the top you will find the different inputs based on the device you want to display on the projector.

- **Laptop** inputs are those made to personal laptops that relate to the cables found in the cubby where the touch panel is located.
- **PC** is the input to select for using the computer built-into the instructor station.
- **Wireless Presentation** is for the solstice device (*see back for details*).
- The **Document Camera** can be found built-into the side of the instructor station.

To the left are controls for the projector and screen.

To the right are controls for the room speakers.

The shut down button on the bottom right will automatically mute the speakers, turn off the projector, and bring the screen up.

### Need some extra help?

Call (909) 869-4040 | [www.cpp.edu/classroomhelp](http://www.cpp.edu/classroomhelp)

**CalPolyPomona**



# 005-0125 Reference Sheet

## Wireless Presentation

This feature is designed to allow multiple students to share presentations from their personal devices (phones or laptops).


The Solstice Pod allows for up to **4** students and faculty to connect to a single display simultaneously.

- You'll first want to make sure your device is connected to **Eduroam** ([www.cpp.edu/wifi](http://www.cpp.edu/wifi)).
- Next, download Solstice from the **Mersive Download Center** for your device ([www.mersive.com/download](http://www.mersive.com/download)).



Once your device is set up make sure your projector is switched to the **Wireless Presentation** option on your room's controller.

Then, open the app on your device and search for your classroom in the search bar across the top using your **building and room number**.

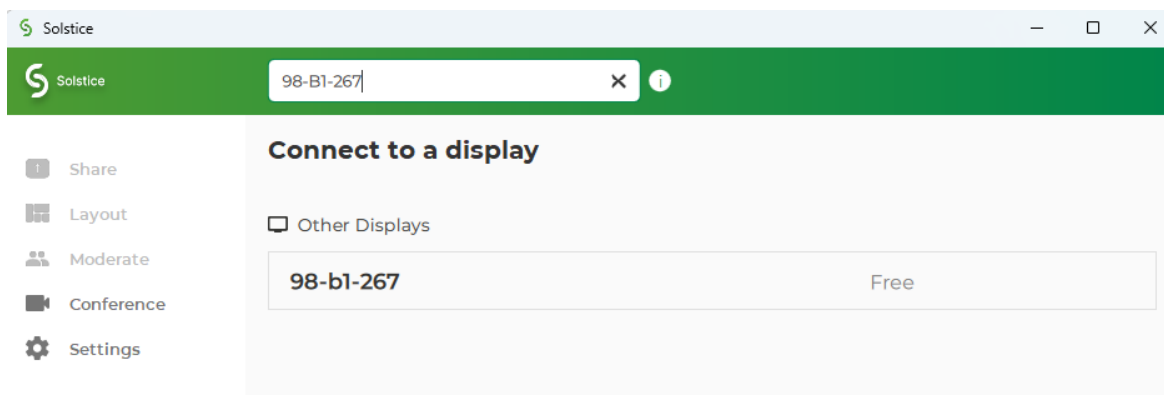

**98-b1-267**



Enter the screen key on the room display

Connect

Cancel

Once you've selected your room, the app will prompt you to type in a **four-digit code** that is displayed on your projector.

After a few seconds your device will now show up on your projector and you can begin presenting your projects to the class.

For more information on the Wireless Presentation feature, please visit the Classroom Help site! ([www.cpp.edu/classroomhelp](http://www.cpp.edu/classroomhelp))

**Need some extra help?**

Call (909) 869-4040 | [www.cpp.edu/classroomhelp](http://www.cpp.edu/classroomhelp)

**CalPolyPomona**