



## Basic Room Controls

The AV equipment in 5-210A is designed as a **Basic Classroom** with the devices controlled via separate remotes. The computer in the room required a Bronco Username and Password to operate.


## Projector Screen Controls

The **projector screen** can be brought down by locating the wall panel beside the screen itself and pressing and/or holding one of the following buttons:


**UP (HOLD):** Retracts the projector screen at a steady rate until it is stowed away.

**STOP (PRESS):** Stops the projector screen at its current position.

**DOWN (HOLD):** Extracts the projector screen at a steady rate until it reaches a set limit.

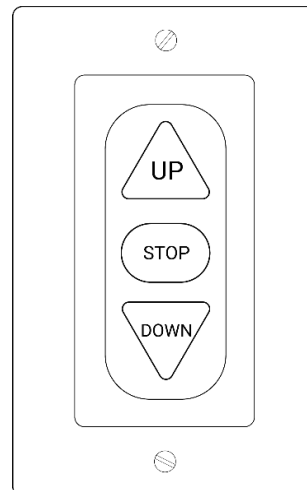

## Projector Input Switching

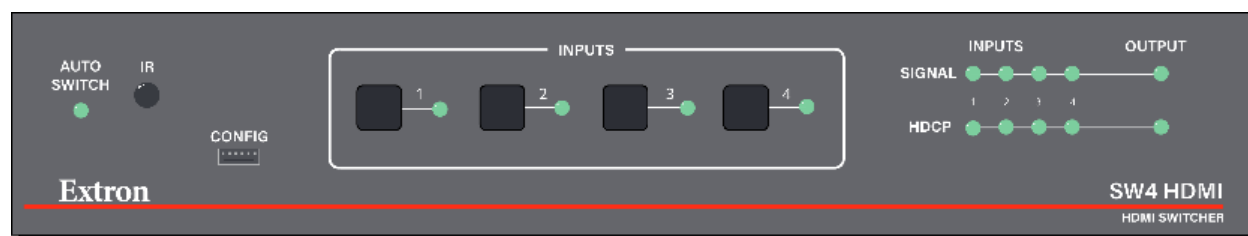

For switching inputs an Extron SW4 can be found inside the Instructor Station with the corresponding device inputs labelled.

### Input Selections

HDMI 1	iMac
HDMI 2	Laptop Connection
HDMI 3	Document Camera



## Projector Controls

Turning on the projector can be done using the included remote. Please follow the speaker instructions for adjusting volume as it should not be done with the remote.

**ON (PRESS):** Wait a few seconds for the projector to warm up.

 
**STANDBY (HOLD):** Wait a few seconds and the projector will prompt you if you want to confirm shutting it down. Navigate to YES using the arrow keys and press ENTER to confirm.

**SHUTTER (PRESS):** Can be used to temporarily stop displaying projector video without the need to turn the projector off and wait for the warmup process. Like *VIDEO MUTE* on other classroom systems.



## Document Camera

The document camera beside the Instructor Station can be used to share documents and smaller objects across all the screens and over Zoom from the computer at the Instructor Station.

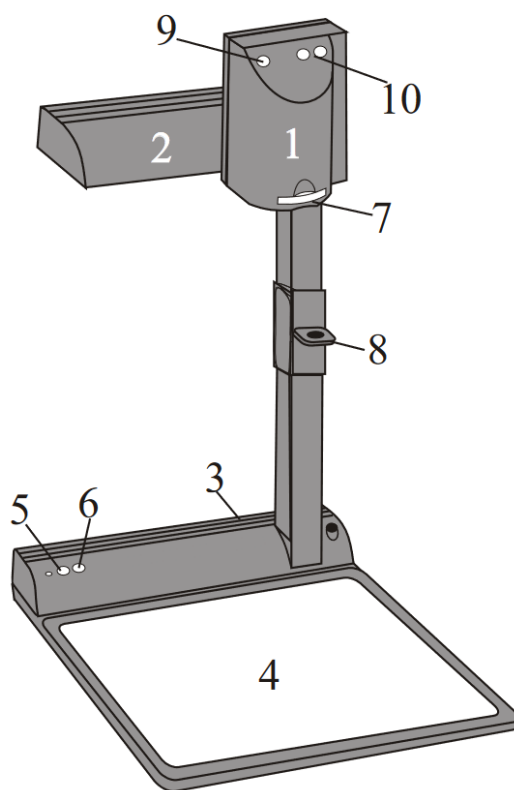

1	Camera Head
2	Light
3	Connectors
4	Working Surface
5	Power ON/OFF Button
6	Light ON/OFF Button
7	Close-up Lense for Camera
8	Pull Ring
9	Auto Focus ON/OFF Button
10	Zoom IN/OUT Buttons