

79A-1263

CONNECTING A LAPTOP

STEP 1: LOCATE THE INPUT PORTS

The port for a personal laptop can be found on the side of the instructor station within a miniature pop-out cubby.

Depending on the cable you have available you can use either one of the ports labelled '**DP**' or '**HDMI**'.

Make sure your cable is securely connected to prevent any issues during use.



STEP 2: TURN ON THE AV SYSTEM

Locate the touch panel on the instructor station, follow the on-screen prompts, and wait for the system to warm-up.

STEP 3: SELECT LAPTOP FROM THE TOUCH PANEL

Once the warmup process has concluded, direct your attention to the touch panel.

Across the top you will find buttons for the different selectable sources:



Press '**Laptop**', and on the center of the screen pick either DP or HDMI based on the input you are using from **STEP 1**.

STEP 4: ADDITIONAL CONTROLS

Volume controls are located on the right of the touch panel screen.

Display controls are used for turning the projector **ON**, **OFF** or enabling **MUTE** (a.k.a. Video Mute – This is useful for if you don't want the projector to display anything but also need to be able to turn it on at a moment's notice.)

NEED SOME EXTRA HELP?

Call (909) 869-4040 | www.cpp.edu/classroomhelp