



Basic Room Controls



98C-5-8's AV equipment is designed as a **Basic Classroom** with the devices controlled via separate remotes.

The projector screen can be brought down by locating the wall panel below the screen itself and pressing and/or holding one of the following buttons:

UP (HOLD): Retracts the projector screen at a steady rate until it is stowed away.

STOP (PRESS): Stops the projector screen at its current position.


DOWN (HOLD): Extracts the projector screen at a steady rate until it reaches a set limit.

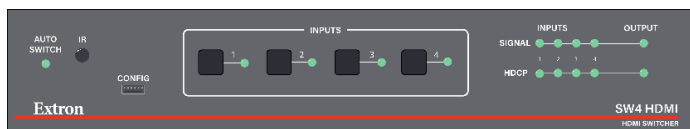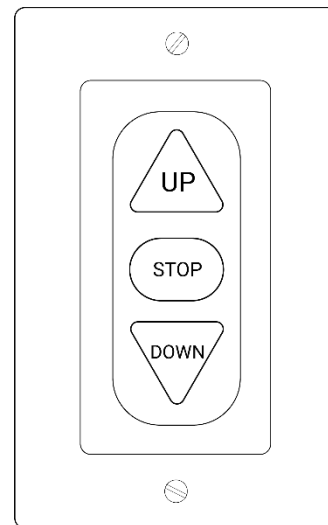

For switching inputs an Extron SW4 can be found beside the computer at the Instructor Station with the corresponding device inputs labelled.

Input Selections

HDMI 1	Instructor Station PC
HDMI 2	Laptop Connection

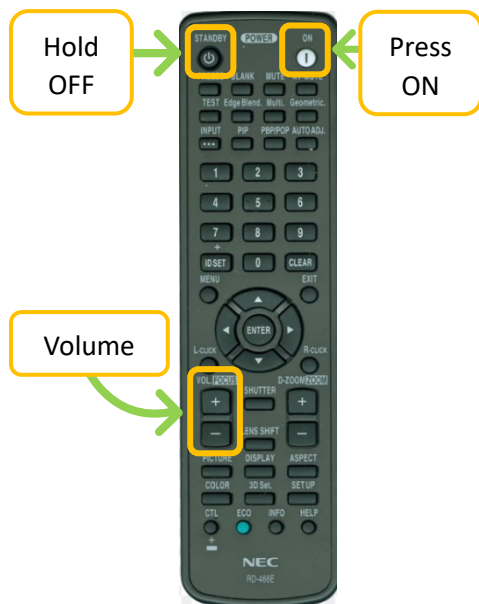

The projector can be turned **ON** by pressing the ON button on the included remote. To turn the projector **OFF**, press and hold the Standby button until you receive a prompt and confirm.

Personal **laptops** can be connected using the included HDMI cable. An adapter ring with additional connection types is included and can be used for laptops that do not have an HDMI output.

Speakers for the classroom are connected directly to the projector and follows the current input. Volume can be set by using the **VOL +/-** buttons on the remote.