




Basic Classroom configurations utilize a wall-mounted controller for the projector screen, a basic IR remote for the projector, and an Extron input switcher. For more information visit: <https://www.cpp.edu/it/client-services/classroom-help/index.shtml>

The Projector Screen can be lowered by locating the wall mounted controls:



The Projector can be turned on using the included remote:

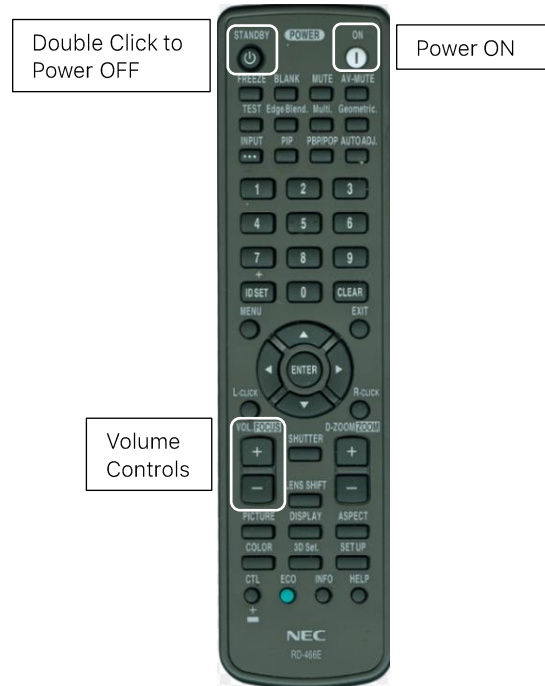

The Switcher is used for changing the projector's input source by pressing the appropriate input button and verifying that the corresponding light indicator is illuminated. The most common input configuration (labelled per room) is:



Laptop Input: This input source utilizes a loose HDMI cable around the lectern. If your computer does not support HDMI, a set of adapters for USB-C, DisplayPort, and Mini DisplayPort can be found within the lectern. If you cannot locate it, contact classroom support (x4040) to request one.

