

## Catchbox Microphones

Some rooms are equipped with Catchbox microphones for in-room amplification. The Catchbox is a wireless, throwable, foam cube microphone. Feel free to toss it to the next speaker, just make sure they know it's coming and toss with care.

Simply lift the Catchbox from its wireless charging base to use it. The Catchbox self-mutes while charging, so allow a moment for it to detect that it's no longer charging and un-mute.

The Catchbox will self mute while in motion to eliminate unwanted noise. It will automatically un-mute when settled.

The Catchbox system also includes a wireless instructor microphone pack. This unit can be worn around the neck with the provided neck-loop, or can be used as a belt-pack transmitter when the included lapel microphone is connected.

Like the Catchbox, this microphone will also self-mute while charging. Simply remove the instructor microphone pack from its charging base to use it.

If the indicator light flashes, briefly press the power button on the side one time to re-sync it with the receiver. A solid on light indicates the pack is synched with the system. No light indicates the pack is off. Press the power button to turn it on.

The Catchbox microphones may also be used with zoom in HyFlex classrooms. Select the **"Microphone (Catchbox)"** device in zoom's audio settings. In this configuration, only the Catchbox and instructor microphone pack will be active. The ceiling mounted microphones will not.

Remember to change this setting back to **"Echo Cancelling Speakerphone"** when finished so the ceiling mounted microphones are active for the next user.

When finished, remember to return the Catchbox and instructor microphone pack to their charging bases.

For additional guides visit: <https://www.cpp.edu/classroomhelp>

Catchbox

 


Wireless Charging Base

Instructor Microphone



Charging Base



zoom